

DL05/06 I/O Option Modules

F0-04TRS <--->

4-point relay output module

F0-04TRS Output Specifications	
Number of Outputs	4
Output Voltage Range	5-30VDC/5-125VAC
Output Type	2 - form C (SPDT) 2 - form A (SPST normally open)
Output Points Consumed	8
Peak Voltage	60VDC/220VAC
AC Frequency	47-63Hz
Maximum Current (resist.)	3A/point with no derating*
Minimum Load Current	10mA @ 5V
Maximum Leakage Current	N/A
ON Voltage Drop	N/A
Maximum Inrush Current	5A
Off to On Response	≤ 5mS (typical)
On to Off Response	≤ 5mS (typical)
Status Indicators	None
Commons	4 isolated
Fuses	4, IEC 3.15A, replaceable, D2-FUSE-1
Terminal Type (Included)	Removable: D0-ACC-4
Base Power Required (5V)	250mA Max. (all points ON)

* Using the ZIPLink wiring system will derate this module to 2 Amps per point.


F0-04TRS Typical Relay Life at 30 Operations per Minute			
Load Type	Rated Voltage	Rated Current	Number of Operations
Resistive	120VAC	3A	120,000
Resistive	120VAC	1A	550,000
Resistive	24VDC	1A	>2M
Inductive: SC-E5 Motor Starter	24VDC	0.2A	>2M (see Note)
Inductive: SC-E5 Motor Starter	120VAC	0.1A operating 1.7A fault	>2M (see Note)

Note: Transient suppression must be installed with inductive loads.


CPU	Firmware Required	DirectSOFT Required
DL05	Version 4.70 or later	Version 3.0c or later
DL06	Version 1.50 or later	Version 4.0, Build 16 or later





See page 2-68 for part numbers of ZIPLink cables and connection modules compatible with this I/O module.

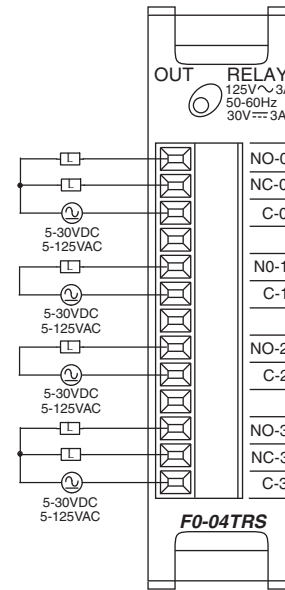

Typical Circuit

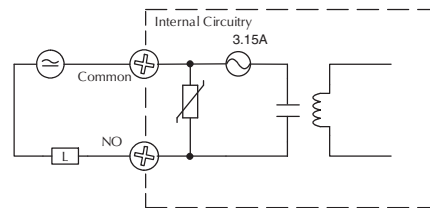

Typical Circuit

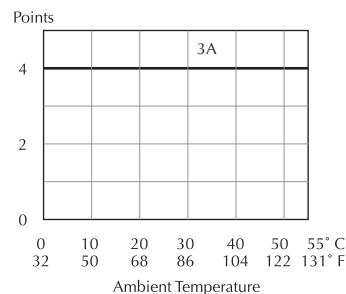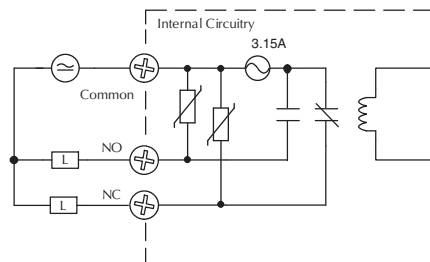

Cut PLC wiring time to minutes instead of hours

The ZIPLink wiring system eliminates the normally tedious process of wiring PLC I/O to terminal blocks. Simply plug one end of a ZIPLink pre-wired terminal block cable into your I/O module and the other end into a ZIPLink connector module. It's that easy. ZIPLinks use half the space, at a fraction of the total cost of terminal blocks.

ZIPLinks are available in a variety of styles to suit your needs, including fused, relay and sensor/LED connector modules. ZIPLinks are available for all DL05/06 Series PLC discrete and analog input and output modules.

For complete information see ZIPLinks in the Terminal Blocks and Wiring Solutions section.



Specify your ZIPLink system

Use the Compatibility Matrix table below:

Step 1	Locate the I/O Module part number.
Step 2	Locate Connector Module Type. (Feedthrough Module, Fuse Module, etc...)
Step 3	Select the cable length by replacing the # symbol with: Blank = 0.5m, -1 = 1m, -2 = 2m ¹
¹ Note: Cable part number denotes compatibility between Connector Module and I/O Modules.	

ZIPLink Wiring System Compatibility Matrix for DL05/06 PLCs						
Step 2: Connector Module Type		Feedthrough Modules	Fuse Modules	Relay Modules	Sensor Input Modules	Pigtail Cable
Step 1: I/O Module	Number of Terminals	ZL-RTB20	ZL-RFU20	ZL-RRL16-24	ZL-LTB16-24	
		Step 3: Cables				
Inputs						
DO-10ND3	13	ZL-DO-CBL13#				
DO-10ND3F	13	ZL-DO-CBL13#				
DO-16ND3	24	ZL-DO-CBL24#L			ZL-DO-CBL24#L	ZL-DO-CBL24#P
FO-08NA-1	10	ZL-DO-CBL10#				
Outputs						
DO-10TD1	13	ZL-DO-CBL13#				
DO-16TD1	24	ZL-DO-CBL24#	ZL-DO-CBL24#	ZL-DO-CBL24#		ZL-DO-CBL24#P
DO-10TD2	13	ZL-DO-CBL13#				
DO-16TD2	24	ZL-DO-CBL24#	ZL-DO-CBL24#			ZL-DO-CBL24#P
DO-08TR	10	ZL-DO-CBL10#				
FO-04TRS*	13	ZL-DO-CBL13#				
Combo In/Out						
DO-07CDR	10	ZL-DO-CBL10#				
DO-08CDD1	13	ZL-DO-CBL13#				
Analog						
FO-04AD-1	8	ZL-DO-CBL8#				
FO-04AD-2	8	ZL-DO-CBL8#				
FO-08ADH-1	13	ZL-DO-CBL13#				
FO-08ADH-2	13	ZL-DO-CBL13#				
FO-04DAH-1	13	ZL-DO-CBL13#				
FO-08DAH-1	13	ZL-DO-CBL13#				
FO-04DAH-2	13	ZL-DO-CBL13#				
FO-08DAH-2	13	ZL-DO-CBL13#				
FO-2AD2DA-2	8	ZL-DO-CBL8#				
FO-4AD2DA-1	8	ZL-DO-CBL8#				
FO-4AD2DA-2	8	ZL-DO-CBL8#				
FO-04RTD**						
FO-04THM**						

* Caution: The FO-04TRS relay outputs are derated not to exceed 2 Amps per point when used with the ZIPLink wiring system.

** The F2-04RTD and F2-04THM modules are not supported by the ZIPLink wiring system. These modules require wire specific to the signal type.

ZIPLink Connector Modules and cable specifications are shown in Terminal Blocks and Wiring Section

Power Budgeting for the DL06

The DL06 has four option module slots. To determine whether the combination of modules you select will have sufficient power, you will need to perform a power budget calculation.

Power supplied

Power is supplied from two sources: the internal base unit power supply and, if required, an external supply (customer furnished). The D0-06xx (AC powered) PLCs supply a limited amount of 24 VDC power. The 24 VDC output can be used to power external devices.

For power budgeting, start by considering the power supplied by the base unit. All DL06 PLCs supply the same amount of 5 VDC power. Only the AC units offer 24 VDC auxiliary power.

Be aware of the trade-off between 5 VDC power and 24 VDC power. The amount of 5 VDC power available depends on the amount of 24 VDC power being used, and the amount of 24 VDC power available depends on the amount of 5 VDC power consumed. Determine the amount of internally supplied power from the table to the right.

Power required by base unit

Because of the different I/O configurations available in the DL06 family, the power consumed by the base unit itself varies from model to model. Subtract the amount of power required by the base unit from the amount of power supplied by the base unit. Be sure to subtract 5 VDC and 24 VDC amounts.

Power required by option modules

Next, subtract the amount of power required by the option modules you are planning to use. Again, remember to subtract both 5 VDC and 24 VDC.

If your power budget analysis shows surplus power available, you should have a workable configuration.

DL06 Power Supplied by Base Units		
Part Number	5 VDC (mA)	24 VDC (mA)
D0-06xx	1500mA	300mA
	2000mA	200mA
D0-06xx-D	1500mA	none

DL06 Base Unit Power Required		
Part Number	5 VDC (mA)	24 VDC (mA)
D0-06AA	800mA	none
D0-06AR	900mA	none
D0-06DA	800mA	none
D0-06DD1	600mA	280mA*
D0-06DD2	600mA	none
D0-06DR	950mA	none
D0-06DD1-D	600mA	none
D0-06DD2-D	600mA	none
D0-06DR-D	950mA	none

* Only if auxiliary 24VDC power is connected to V+ terminal.

DL06 Power Consumed by Other Devices		
Part Number	5 VDC (mA)	24 VDC (mA)
D0-06LCD	50mA	none
D2-HPP	200mA	none
DV-1000	150mA	none
C-more Micro-Graphic	210mA	none

Power Budgeting Example		
Power Source	5VDC power (mA)	24VDC power (mA)
D0-06DD1 (select row A or B)	A	1500mA
	B	2000mA
		300mA
		200mA
Current Required	5VDC power (mA)	24VDC power (mA)
D0-06DD1	600mA	280mA*
D0-16ND3	35mA	0
D0-10TD1	150mA	0
D0-08TR	280mA	0
F0-4AD2DA-1	100mA	0
D0-06LCD	50mA	0
Total Used	1215mA	280mA
Remaining	A	285mA
	B	785mA
		20mA
		note 1

* Auxiliary 24 VDC used to power V+ terminal of D0-06DD1 sinking outputs.

Note 1: If the PLC's auxiliary 24 VDC power source is used to power the sinking outputs, use power choice A, above.

DL05/06 Power Consumed by Option Modules		
Part Number	5 VDC (mA)	24 VDC (mA)
D0-07CDR	130mA	none
D0-08CDD1	100mA	none
D0-08TR	280mA	none
D0-10ND3	35mA	none
D0-10ND3F	35mA	none
D0-10TD1	150mA	none
D0-10TD2	150mA	none
D0-16ND3	35mA	none
D0-16TD1	200mA	none
D0-16TD2	200mA	none
F0-04TRS	250mA	none
F0-08NA-1	5mA	none
F0-04AD-1	50mA	none
F0-04AD-2	75mA	none
F0-08ADH-1	25mA	25mA
F0-08ADH-2	25mA	25mA
F0-04DAH-1	25mA	150mA
F0-08DAH-1	25mA	220mA
F0-04DAH-2	25mA	30mA
F0-08DAH-2	25mA	30mA
F0-2AD2DA-2	50mA	30mA
F0-4AD2DA-1	100mA	40mA
F0-4AD2DA-2	100mA	none
F0-04RTD	70mA	none
F0-04THM	30mA	none
D0-DEVNETS	45mA	none
H0-PSCM	530mA	none
H0-ECOM	250mA	none
H0-CTRIO	250mA	none
H0-ECOM100	300mA	none
F0-08SIM	1mA	none
D0-DCM	250 mA	none
F0-CP128	150 mA	none
F0-08SIM	1 mA	none